

Alphanumeric pocket pager receiver.

FP CODE : APAG

To turn on ; Press and hold down the right hand button 3 for a few seconds to turn on, the receiver will beep.

After a few seconds the screen will clear apart from symbols on the top row, the pager is now ready for use.

When an alert has been received the pager will display the identity of the alerting transmitter such as “BATHROOM” on receiving the alert, the pager message should be deleted and the pager silenced as follows:

To silence and delete; press buttons in the following sequence at approximately half second intervals or less:

- 1 Press centre (2) button reads “BATHROOM” (for example)
- 2 Press Left hand (1) button reads lock message
- 3 press centre (2) button reads delete message
- 4 press Left (1) button reads 00/00 INDICATING MESSAGE DELETED



sequence may be shown as **2121**

If this sequence has been entered correctly the message should be deleted and the pager silenced, it should show 00/00 messages stored.

The screen then becomes blank and is ready for the next message.

If a previous messages are still in memory the display will show 01/10 etc. Each message in memory can be displayed and deleted individually by pressing buttons in sequence **313** until the stored message is visible then and then repeating

the sequence **2121** for each stored message

Frequency
Precision Ltd.
Shorts Farm
Northlew
Okehampton
Devon
EX20 3NR UK

Phone 01837810590
Fax 01837810862
contact@frequencyprecision.com
www.pressuremat.com

Directors
D. F. G. Dwyer and S.M. Dwyer
Registered in England 1944317
Registered Office ; Shorts Farm
Northlew Okehampton Devon
EX20 3NR

TO SET OTHER FUNCTIONS OR TO TURN PAGER OFF

WAIT UNTIL THE PAGER SCREEN GOES BLANK.

PRESS the oval right hand (3) button twice, functions can be selected individually by pressing the centre select button (2), each press of the centre (2) button moves the select position to the right as shown by the function flashing FOR INSTANCE:

TO TURN OFF THE PAGER

Press button “3” TWICE then press the centre “2” button THREE times & then the right hand button 3 TWICE. (press button sequence 322233)

To turn the pager back on hold down button 3

The code displayed immediately on turn on is like a phone number and is the identity of the pager receiver.

OTHER FUNCTIONS First press oval (3) read button twice then;

To: SET VIBRATE ONLY PRESS THE SEQUENCE 33323

To restore beep press the sequence 3333

TO SET; DATE and TIME press oval button twice as above but press centre button 2 once & right hand button 3 twice. This enables minutes, hours days and years to be set similar to a digital watch .

The “Quiet beep”

You may notice a quiet beep every few minutes. This is most often due to messages stored in the pager and not deleted OR A LOW BATTERY.

WAIT TILL SCREEN CLEARS THEN PRESS IN SEQUENCE 313, the stored message will be displayed ; press, 2121 to clear stored message .

Repeat the process for every stored message

BATTERY CHANGE

The pager indicates by beeping QUIETLY when the battery needs to be Changed approx every 30 days, the battery can be accessed by sliding the rear panel to the left. Observe that the + is to the left The receiver is powered by a single AAA alkaline battery which has a life in continuous standby of approximately 30 days. Pager battery life can be increased by turning off if not required for some hours of more.

The pager has many functions not necessary for most applications. The date and time can be useful and set as described above as can the alarm function.

Also

Continuous pressure on any button should cause the screen light to operate.

**Frequency
Precision Ltd.
Shorts Farm
Northlew
Okehampton
Devon
EX20 3NR UK**

**Phone 01837810590
Fax 01837810862
contact@frequencyprecision.com
www.pressuremat.com**

**Directors
D. F. G. Dwyer and S.M. Dwyer
Registered in England 1944317
Registered Office ; Shorts Farm
Northlew Okehampton Devon
EX20 3NR**